 
HR Pump Accessories



Part Nos. AP19FV0012P1L, AP19CV0012NL, IM-.016



 
Did you know that these little parts can add life to your air compressor? Just put them inline with your Ingram Products HR10WB3 air compressor and see the results years down the road.



Intake or Discharge Air Filter

The Intake/Discharge Air Filter provides a final stage of filtering before it goes out to your equipment. It will filter particulates that can clog small orifices and impede air flow. Keep your compressor clean and running smoothly with the AP19FV0012P1L


AP19FV0012P1L



AP19CV0012NL

Back Check Valve

 The Back Check Valve has a very low crack pressure and will prevent fluids from getting back to your pump during shutdowns or power failure. Avoid drowning your valuable compressor with the AP19CV0012NL.



Fixed Orifice

The Fixed Orifice is designed to steady air flow and reduce pulsing. Insure accurate pressure readings and install the IM-.016 diameter fixed orifice into your compressor system.

IM - .016